


# GreaseMax®

## INSTALLATION INSTRUCTIONS

---

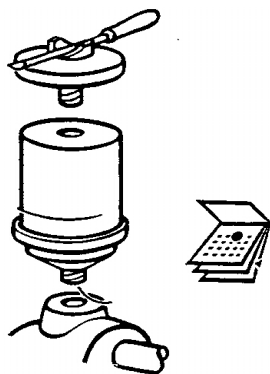

1. **Screw in the starter cap**  
(you will hear the seal break while doing this)  
**tighten completely** with a screw driver or similar
2. **Record change over date**
3. **Pre-grease bearing before first installation**
4. **Install GreaseMax hand tight into grease point**

**DO NOT OPEN GreaseMax**

**DO NOT REMOVE GreaseMax until the change over date**

**GreaseMax** is designed to operate at an average environmental temperature of 25°C. Refer to brochure for information about using **GreaseMax** at different temperatures.

Allow 8-40 hours for operation to commence depending on **GreaseMax** type.

If **GreaseMax** is to be installed with extension lines, use 8mm ID tubing. The maximum recommended length is 2 metres. Pre-fill all lines.

Refer to Technical Notes or [www.dis.com.au](http://www.dis.com.au) for detailed information.

Wear protective gloves when installing **GreaseMax**.

Dispose of used **GreaseMax** in the industrial waste bin.

---

**COLOUR CODES:** (Colour of the activator screw in the base of **GreaseMax**)

White	1 month unit	(at 25°C)
Blue	3 month unit	
Red	6 month unit	
Grey	12 month unit	

⇒ **Note: colour of starter cap must match colour of activator in base of GreaseMax**

---

**WARNING:** GreaseMax uses a small quantity of potassium hydroxide UN1814 as part of its' operation. If GreaseMax is opened or accidentally damaged and the liquid escapes onto the skin or eyes rinse immediately with plenty of water and contact a doctor or Poisons Information Centre. Refer to MSDS.

---

**For specialist advice contact:**

**Delta Distribution Pty Ltd**  
**Phone:** +61 3 9723 8600  
**Fax:** +61 3 9723 5600  
**Email:** [info@dis.com.au](mailto:info@dis.com.au)  
**Web:** [www.dis.com.au](http://www.dis.com.au)